

LOCKED PROJECTOR KEYPAD

Instructions for unlocking

If, when you press a button on the keypad on the projector itself (not the remote control) you get a padlock symbol, but nothing else, this means that the keypad has been locked using the remote control handset.

To unlock the keypad, follow these instructions using the remote control handset.

- 1) Press [**MENU**]. The menu is displayed.
- 2) Press [**√**] several times until 'Advanced Menu' is highlighted.
- 3) Press [**Select ↵**]. The advanced menu is displayed.
- 4) Press [**√**] until 'Setup' is highlighted.
- 5) Press [**Select ↵**]. The Setup menu is displayed.
- 6) Press [**>**] then press [**√**] until 'Keypad/Remote' highlighted.
- 7) Press [**Select ↵**]. 'Locked' is highlighted.
- 8) Press [**>**] To change setting to 'Enabled'.
- 9) Press [**MENU**] twice to save the setting and exit.

See pages 24 to 27 of user manual for details of all menu options.